


DICHROIC 35/50



- Cool beam – 66% of the heat produced is radiated through the back of the lamp
- Dimmable using a suitable dimmer for operation with a transformer
- Constant colour and light output throughout lamp life
- Excellent colour rendering
- Universal burning position
- Accent and decorative lighting in retail, commercial and domestic applications
- Suitable for use in open luminaires following Luminaire Standard EN 60598-1
- Excellent colour rendering (CRI=100)

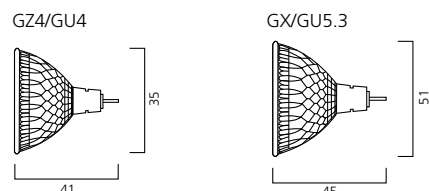

Dichroic 50 24°

425mmØ	1m	50W
850mmØ	2m	2500lx
1275mmØ	3m	625lx
1700mmØ	4m	278lx
		156lx

Dichroic 50 60°

1155mmØ	1m	35W	50W
2309mmØ	2m	700lx	900lx
3464mmØ	3m	175lx	225lx
4619mmØ	4m	78lx	100lx
		44lx	56lx

Dichroic 35 10°

175mmØ	1m	20W	35W
350mmØ	2m	3600lx	5700lx
525mmØ	3m	900lx	1425lx
700mmØ	4m	400lx	633lx
		225lx	356lx

Dichroic 50 10°

175mmØ	1m	20W	35W	50W
350mmØ	2m	3600lx	5000lx	8000lx
525mmØ	3m	900lx	1250lx	2000lx
700mmØ	4m	400lx	556lx	889lx
		225lx	313lx	500lx

Dichroic 50 38°

689mmØ	1m	20W	35W	50W
1377mmØ	2m	660lx	1200lx	1950lx
2066mmØ	3m	165lx	300lx	488lx
2755mmØ	4m	73lx	133lx	217lx
		41lx	75lx	122lx

DICHROIC 35/50

Code	Description	Watt	Volt	Beam Angle	Cap	Colour Temp	Luminous Intensity	Average Rated Life	Packing Qty.
Dichroic 35									
0022336	FTB 12V/20W SP10°	20W	12V	10°	GU4	2900K	3600 cd	1500 hrs	10
0022339	FTE 12V/35W SP10°	35W	12V	10°	GU4	2900K	5700 cd	1500 hrs	10
Dichroic 50									
0022580	ESX 20W/12V SP10°	20W	12V	10°	GU5.3	2925K	3600 cd	4000 hrs	10
0021765	BAB 20W/12V WFL38°	20W	12V	38°	GU5.3	2925K	660 cd	4000 hrs	10
0022581	FMT 35W/12V SP10°	35W	12V	10°	GU5.3	3000K	5000 cd	4000 hrs	10
0021766	FMW 35W/12V WFL38°	35W	12V	38°	GU5.3	3000K	1200 cd	4000 hrs	10
0022391	35W/12V VWFL60°	35W	12V	60°	GU5.3	3000K	700 cd	4000 hrs	10
0022582	EXT 50W/12V SP10°	50W	12V	10°	GU5.3	3050K	8000 cd	4000 hrs	10
0022348	EXZ 50W/12V FL24°	50W	12V	24°	GU5.3	3050K	2500 cd	4000 hrs	10
0021767	EXN 50W/12V WFL38°	50W	12V	38°	GU5.3	3050K	1950 cd	4000 hrs	10
0022390	FNV 50W/12V VWFL60°	50W	12V	60°	GU5.3	3050K	900 cd	4000 hrs	10